

# Quick Start Reference Guide


Refer to Product Safety Manual for Safety Statements

Complete Owner's Manual available online

## CLEAN FILTER

This oven displays CLEAN FILTER at user defined intervals. When the message displays ACP recommends cleaning the air filter thoroughly.

**Cleaning the air filter will not shut off the message.** The message will stop displaying automatically after 24 hours. Depending on microwave use and environmental conditions, the filter may need to be cleaned more frequently. Once the frequency is determined, set the option for the appropriate time frame.

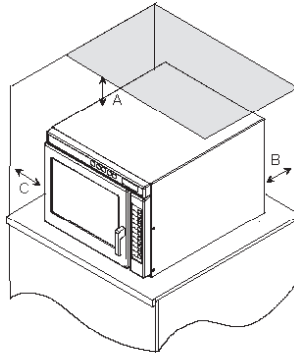


## Oven Clearances

A—For North American (UL/CSA) models, allow at least 2" (5.1 cm) of clearance around top of oven. For International (50 Hz) models, allow at least 7" (17.8 cm) of clearance around top of oven. Proper air flow around oven cools electrical components. With restricted air flow, oven may not operate properly and life of electrical parts is reduced.

B—Allow at least 2 9/16" (6.5 cm) between air discharge on back of oven and back wall.

C—Allow at least 2" (5.1 cm) around sides of oven.

## So...how do I use it?

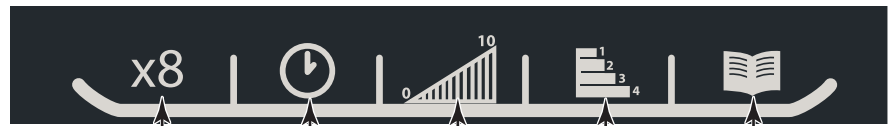

Quantity Time Entry Power Level Stage Program Save

## 2 Preprogrammed Pads

To cook food using preprogrammed cooking sequences.

- Open oven door and place food in oven. Close door.
  - To add additional servings press QUANTITY pad.
  - Up to eight quantities can be added.
- Press desired pad.
- Oven begins to cook.
- At end of cooking cycle oven beeps and shuts off. **DONE** displays.

### Mid-Cycle Pause

To add a pause to a programmed cooking cycle:

- Press HIDDEN PAD after entering time or power level.
- A short beep sounds. This indicates the program is set for a mid-cycle pause.
- Continue programming pad as desired.

When programmed pad is used, pause will occur in the middle of total programmed time. Oven will beep continuously and **Program Paused** displays until door is open and shut. To continue cycle, press START pad.

## Manual Operation

To cook food using a specific entered time and power level.

- Open oven door and place food in oven. Close door.
- Press TIME ENTRY pad and enter cooking time.
- Press POWER LEVEL pad to change power level if desired.
  - For a lower microwave power, press pads 1 (for 10%) through 9 (for 90%).
- If stage cooking is desired, press STAGE pad and repeat steps 2 through 4.
- Press START pad.
- At end of cooking cycle oven beeps and shuts off. **DONE** displays.

## Programming Pads

- READY** must be in the display. If not, open and close door.
- Press PROGRAM SAVE pad.
  - Programming mode begins.
  - Enter Program to Add/Review: displays.
- Press pad to be programmed or reprogrammed.
  - Display will change to review all settings for the pad.
  - The pad number that is being programmed displays beside the word **ITEM**.
- Press TIME ENTRY to program amount of cooking time.
  - Enter desired cooking time by using numeric key pads.
  - Maximum cooking time is 60 minutes.
- Press POWER LEVEL to program level of microwave power.
  - Press numeric key pad for desired level. Press numeric key pad again to set power level to 100%.
  - For a lower microwave power, press pads 1 (for 10%) through 9 (for 90%).
- Press Quantity pad if different cooking factor is desired.
  - Default of CF:80 displays.
  - Enter desired cooking factor by using numeric key pads (1 for 10% through 0 for 100%).
- Press PROGRAM SAVE to save the program changes.
- To discard changes, press STOP/RESET.


# Quick Start Reference Guide

Refer to *Product Safety Manual* for Safety Statements


Complete Owner's Manual available online

## Changing user options


Options such as single or double pad programming and beep volume can be changed to suit individual preferences.

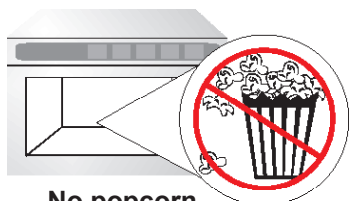


No popcorn

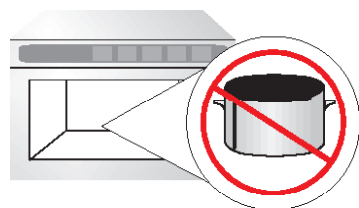

No metal pans

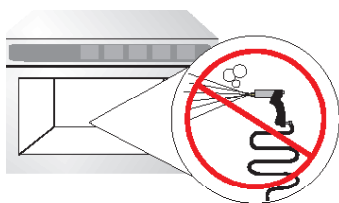

DO NOT power spray

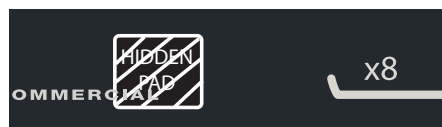

Amana



MenuMaster

### To change options:

- Press hidden pad.
  - Pad is unmarked.
  - The display remains blank when hidden pad is pressed.
- Press PROGRAM SAVE pad.
  - The first user option will display. Oven is now in options mode.
- Press number pad that controls option to be changed.
  - See table below for options.
  - Current option will display.
- Press number pad again to change the option.
  - Each time pad is pressed, option will change.
  - Match code displayed with code for desired option.
  - Changes take affect after pad is pressed.
  - To change additional options, repeat steps 3 and 4.
- Press PROGRAM SAVE to return to READY, or open and close oven door.

Numbered Pads	Displays	Options
1 Double Digit Entry	Disabled Enabled	Allows 10 (0-9) preprogrammed pads. Allows 100 (00-99) preprogrammed pads.
2 Manual Programming	Disabled Enabled	Manual time entry/cooking not allowed Manual time entry/cooking allowed
3 Reset on Door Open	Disabled Enabled	Opening oven door does not reset oven back to ready Opening oven door resets the oven back to ready mode
4 Keybeep	OFF ON	Keys do not beep when pressed (keybeep off) Keys beep when pressed (keybeep on)
5 Speaker Volume	OFF LOW MEDIUM HIGH	Keybeep volume OFF Keybeep volume LOW Keybeep volume MEDIUM Keybeep volume HIGH
6 End of Cook Signal	Solid Beep 3 Second Beep 4 Beeps Once 4 Beeps Repeating	Food done signal is a continuous beep until reset by user Food done signal is a three second beep Food done signal is four beeps continuously Food done signal is four beeps, four times
7 Keypad Active	15 Seconds 30 Seconds 60 Seconds 120 Seconds Always	Keypad time entry window is 15 seconds Keypad time entry window is 30 seconds Keypad time entry window is one minute Keypad time entry window is two minutes Keypad time entry window is always active
Stage Pad Clean Filter Message (Frequency)	Disabled Weekly Monthly Quarterly	Oven will not display Clean Filter Oven will display Clean Filter every seven (7) days Oven will display Clean Filter every thirty (30) days Oven will display Clean Filter every ninety (90) days