



1000W Commercial Microwave



Model: 180MW1000SS

05/2017

Please read and keep these instructions. Indoor use only.

IMPORTANT SAFETY INSTRUCTIONS

- **When using electrical equipment, basic safety precautions should be followed to reduce the risk of burns, electrical shock, fire, or injury to persons.**
 - **READ all of the instructions before using this equipment.**

1. This equipment **MUST BE GROUNDED**. Connect only to properly **GROUNDED** outlet. See "GROUNDING INSTRUCTIONS" on page 3 for further details.
2. Use this equipment **ONLY** for its intended use as described in this manual. This type of oven is specifically designed to heat, cook or dry food. It is not designed for industrial or laboratory use.
3. **DO NOT** heat items able to explode in this microwave, such as: eggs, sealed containers, glass jars, etc.
4. **DO NOT** operate this equipment if the cord, plug and/or door is damaged, if is not working properly or if it has been damaged or dropped.
5. This equipment, including power cord, must be serviced **ONLY** by qualified service personnel. Contact the nearest authorized service facility for examination, repair, or adjustment.
6. **DO NOT** cover or block filter or other openings on equipment.
7. **DO NOT** store this equipment outdoors.
8. **DO NOT** use this product near water or immerse the cord and/or plug in water.
9. Keep cord **AWAY** from **HEATED** surfaces.
10. **DO NOT** let cord hang over edge of table or counter.
11. **DO NOT** overcook food as to avoid fire in oven cavity.
12. If materials inside the oven ignite, keep oven door **CLOSED**, turn oven off and disconnect the power cord, or shut off power at the fuse or circuit breaker panel.
13. **DO NOT** use the cavity for storage.
14. Do not overheat liquids.
15. After heating, allow the container to stand in the microwave oven for a short time before removing the container.
16. **DO NOT** operate equipment without load or food in oven cavity.
17. **DO NOT** use metal utensils in oven.
18. **NEVER** use paper, plastic, or combustible materials that are not intended for cooking.
19. Clean oven regularly and remove any food deposits.
20. For commercial use only.

SAVE THESE INSTRUCTIONS

- To avoid risk of electrical shock or death, this oven must be earthed.
To avoid risk of electrical shock or death, do not alter the plug.

OPENING YOUR NEW OVEN

1. Inspect oven for any damage such as cracks or dents in door or inside oven cavity.
2. Remove all materials from oven interior.
3. Remove all plastic wrap and packaging material before use.
4. Do not install oven next to or above source of heat, such as pizza oven or deep fat fryer. This could cause the microwave oven to operate improperly and could shorten life of electrical parts.
5. Install oven on a level countertop surface.
6. Outlet should be located so that the plug is accessible when oven is in place.

GROUNDING INSTRUCTIONS

 

 
 


Oven MUST be grounded. Grounding reduces risk of electric shock by providing an escape wire for the electric current, if an electrical short occurs. This oven is equipped with a cord having a ground wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded. Do not use an extension cord.

OPERATION INSTRUCTIONS


Turning The Oven On:

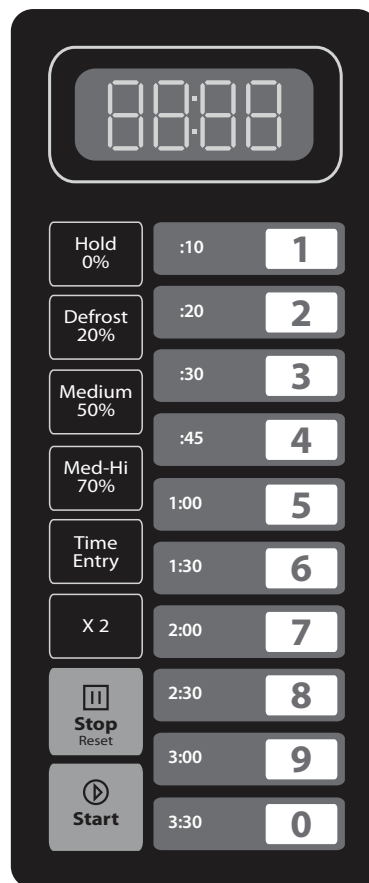 
- “-- --” displays when the oven is powered up for the first time.

Time Entry:



- The user may manually enter a cook time and power level while in this mode.
- During Ready Mode LED displays “0:00”.
- While the oven is in the Ready Mode, pressing the  key will put the oven into Time Entry Mode: “00:00” will display.
- Press ,  or  key to select power level, LED will display the related power. If the same key is pressed twice, the power will change to PL10 (Power Level 10 or full power). If no power is chosen, PL10 is the default.
- During setting process, press the  key to enter Time Entry Mode and begin cooking. Press the  key to enter Ready Mode.

Manual Cook Mode:

- This mode allows cooking of the food items. While in Manual Cook Entry Mode, pressing the  key will cause the oven to begin Manual Cook Mode.
- During this mode, cooking time displays, the fan operates and oven light will be on.

 
 



Programming Mode

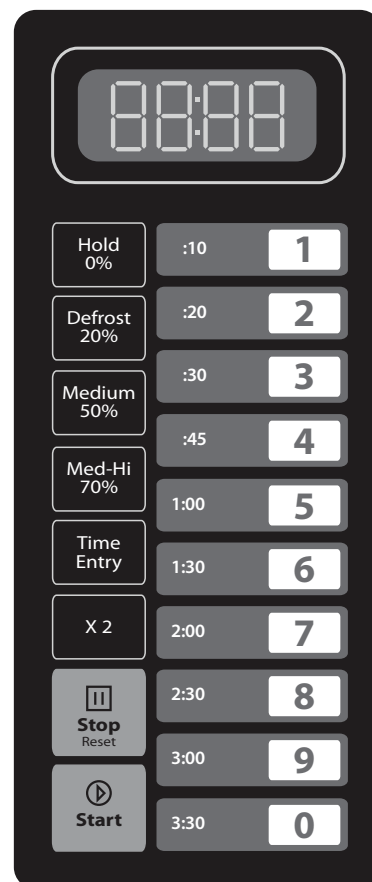 
1. This mode allows the user to assign cook times and power levels to the keypad number keys.
2. Open the door and press and hold Number Key 1 for 5 seconds. The buzzer sounds once to indicate. Programming Mode is activated.
3. LED displays "ProG". Program settings are now ready to be entered.
4. Selected desired number, 1-10, for the programmed setting.
5. Press the  key, LED will display the saved time. Input desired new time.
6. Select desired power level. LED will display the related power. If no power chosen, the maximum power level, 100%, is the default.
7. After setting the time and power, press the  key to save the cooking program. LED displays "ProG".
8. Close the door and the oven will return to Ready Mode.

Example:

For a cook setting of 1 minute and 15 seconds at 50% power under the number 4 key.

1. Open oven door and press Number Key "1" for 5 seconds, LED displays "ProG".
2. Press Number Key "4". The program will be saved in "4".
3. Press the  key, LED displays "0:00".
4. Press Number Keys "1", "1" and "5" to input the cooking time, LED displays 1:15.
5. Press the  key to input 50% power level. LED displays "PL5".
6. Press  key to save.
7. Close oven door.

To use this program press "4". The oven will start operating for 1:15 at 50% power.



CARE AND CLEANING

- **To avoid electrical shock which can cause severe personal injury or death, unplug power cord or open circuit breaker to oven before cleaning or removing light bulb.**

- Cleaning the interior and exterior will require a mild detergent, water and a soft sponge or cloth.
- Do not use cleaners that include ammonia or citrus.
- Do not use water pressure cleaning systems on your microwave.
- Inspect air vents monthly and clean using a damp cloth.

TROUBLESHOOTING

COMPLAINT	POSSIBLE CAUSE	REMEDY
Dim oven light	Cooking at low power level	This is normal
Steam forms on oven door	When cooking foods in a microwave steam is generated.	This is normal
Hot air expelled from vents	Foods cooking in a microwave may release heat	This is normal
Oven does not start	Power cord not plugged in correctly	Plug cord into outlet correctly
	Fuse blown or circuit breaker open	Replace fuse (should be repaired by authorized servicer) or reset breaker
	Malfunctioning outlet	Test outlet with other electrical appliance
	Door not closed	Close door

WARRANTY

6 MONTH REPLACEMENT WARRANTY

- This warranty is effective from the time of purchase.
- This warranty is not effective if damage occurs because of accident, carelessness, improper installation, lack of proper set – up, supervision when required or if the equipment is installed or operated in any manner contrary to the installation and operating instructions.
- Work performed by unauthorized personnel or unauthorized service agencies voids this Warranty
- This warranty does not apply to, and Solwave is not responsible for any warranty claims on products sold or used outside of the contiguous United States.
- This equipment is intended for commercial use only. Warranty is void if equipment is installed in anything other than commercial applications.