



## 1000W Stackable 1.2 Cu. Ft. Commercial Microwave



**Model:** 180MW112D

05/2017

***Please read and keep these instructions. Indoor use only.***

## IMPORTANT SAFETY INSTRUCTIONS

**When using electrical equipment, basic safety precautions should be followed to reduce the risk of burns, electrical shock, fire, or injury to persons.**

**READ all of the instructions before using this equipment.**

1. This equipment **MUST BE GROUNDED**. Connect only to properly **GROUNDED** outlet. See "GROUNDING INSTRUCTIONS" on page 3 for further details.
2. Use this equipment **ONLY** for its intended use as described in this manual. This type of oven is specifically designed to heat, cook or dry food. It is not designed for industrial or laboratory use.
3. **DO NOT** heat items able to explode in this microwave, such as: eggs, sealed containers, glass jars, etc.
4. **DO NOT** operate this equipment if the cord, plug and/or door is damaged, if is not working properly or if it has been damaged or dropped.
5. This equipment, including power cord, must be serviced **ONLY** by qualified service personnel. Contact the nearest authorized service facility for examination, repair, or adjustment.
6. **DO NOT** cover or block filter or other openings on equipment.
7. **DO NOT** store this equipment outdoors.
8. **DO NOT** use this product near water or immerse the cord and/or plug in water.
9. Keep cord **AWAY** from **HEATED** surfaces.
10. **DO NOT** let cord hang over edge of table or counter.
11. **DO NOT** overcook food as to avoid fire in oven cavity.
12. If materials inside the oven ignite, keep oven door **CLOSED**, turn oven off and disconnect the power cord, or shut off power at the fuse or circuit breaker panel.
13. **DO NOT** use the cavity for storage.
14. Do not overheat liquids.
15. After heating, allow the container to stand in the microwave oven for a short time before removing the container.
16. **DO NOT** operate equipment without load or food in oven cavity.
17. **DO NOT** use metal utensils in oven.
18. **NEVER** use paper, plastic, or combustible materials that are not intended for cooking.
19. Clean oven regularly and remove any food deposits.
20. For commercial use only.

**SAVE THESE INSTRUCTIONS**

**To avoid risk of electrical shock or death, this oven must be earthed.**

**To avoid risk of electrical shock or death, do not alter the plug.**

## OPENING YOUR NEW OVEN

1. Inspect oven for any damage such as cracks or dents in door or inside oven cavity.
2. Remove all materials from oven interior.
3. Remove all plastic wrap and packaging material before use.
4. Do not install oven next to or above source of heat, such as pizza oven or deep fat fryer. This could cause the microwave oven to operate improperly and could shorten life of electrical parts.
5. Install oven on a level countertop surface.
6. Outlet should be located so that the plug is accessible when oven is in place.

## GROUNDING INSTRUCTIONS

Oven **MUST** be grounded. Grounding reduces risk of electric shock by providing an escape wire for the electric current, if an electrical short occurs. This oven is equipped with a cord having a ground wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded. Do not use an extension cord.

## DIAL OPERATION

### Instructions

1. In waiting state, turn the dial left to choose the microwave power from 100% to 20%. (100%, 70%, 50%, 20%)
2. Turn the dial right to adjust the cooking time. (The range of time is from 15 seconds to 6 minutes)
3. The cooking begins.
4. The buzzer will sound (5) five times when cooking finishes, then return to waiting state.

### Interrupting Operation

Open oven door to interrupt operation or turn time entry knob counterclockwise to "0".

When cooking is interrupted by opening door, oven automatically resets to zero time.

To resume microwave oven operation, close door and re-enter desired time by turning knob clockwise.

### Changing Time and Canceling Mistakes

Heating time can be changed at any time while the oven is operating. Turn knob to desired new setting. To set cooking time to zero, turn knob counterclockwise to "0". Setting the time to zero cancels the set cooking time and turns the oven off.

**Menu Guide**

	Slice of Pizza	35-40 sec
	Roll or Pastry	7-12 sec
	Small	30-35 sec
	Large	1-2 min
	Hotdog	25-35 sec

**POWER** 0 15 30 45  
**TIME** 1 2 3 4 5 6

	Hamburger	1-2 min
	Small	1:30-2 min
	Large	5-6 min
	Casserole	5-6 min

**To operate:**

1. Rotate dial counter anticlockwise to set power level.
2. Rotate dial counter clockwise to set time.
3. Open door to interrupt cooking.

## CARE AND CLEANING

**To avoid electrical shock which can cause severe personal injury or death, unplug power cord or open circuit breaker to oven before cleaning or removing light bulb.**

- Cleaning the interior and exterior will require a mild detergent, water and a soft sponge or cloth.
- Do not use cleaners that include ammonia or citrus.
- Do not use water pressure cleaning systems on your microwave.
- Inspect air vents monthly and clean using a damp cloth.

## TROUBLESHOOTING

COMPLAINT	POSSIBLE CAUSE	REMEDY
Dim oven light	Cooking at low power level	This is normal
Steam forms on oven door	When cooking foods in a microwave steam is generated.	This is normal
Hot air expelled from vents	Foods cooking in a microwave may release heat	This is normal
Oven does not start	Power cord not plugged in correctly	Plug cord into outlet correctly
	Fuse blown or circuit breaker open	Replace fuse (should be repaired by authorized servicer) or reset breaker
	Malfunctioning outlet	Test outlet with other electrical appliance
	Door not closed	Close door

## WARRANTY

### 1 YEAR REPLACEMENT WARRANTY

- This warranty is effective from the time of purchase.
- This warranty is not effective if damage occurs because of accident, carelessness, improper installation, lack of proper set – up, supervision when required or if the equipment is installed or operated in any manner contrary to the installation and operating instructions.
- Work performed by unauthorized personnel or unauthorized service agencies voids this Warranty
- This warranty does not apply to, and Solwave is not responsible for any warranty claims on products sold or used outside of the contiguous United States.
- This equipment is intended for commercial use only. Warranty is void if equipment is installed in anything other than commercial applications.